


# CHANGING PAPER

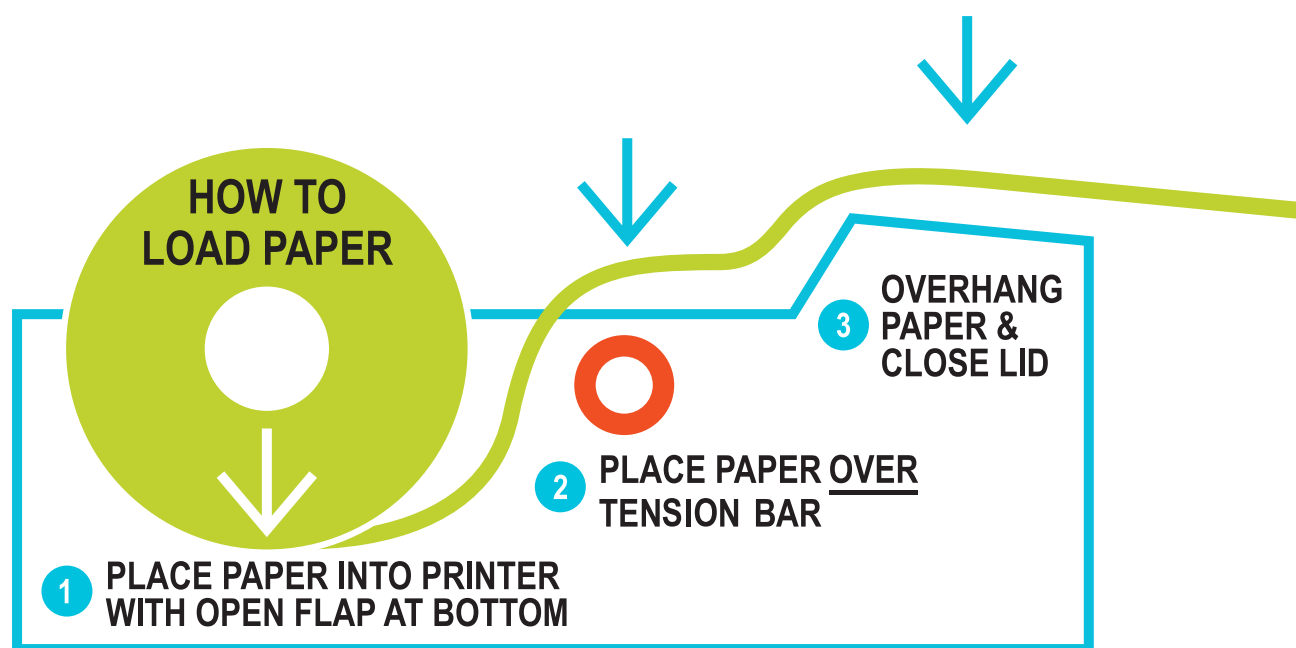

Open printer and remove old ticket stock roll.

Place new roll of ticket stock in printer, making sure the end of the paper is coming from under the roll, and going up and over the tension bar.

If the paper is placed in the printer incorrectly, with the end of the paper going under the tension bar, instead of over, you may experience tickets printing incorrectly. i.e. Printer may only print a piece of the ticket.

Once the ticket stock roll is loaded in printer properly, align paper in groove of printer, pull the end of the paper out 10-12 inches, and shut printer door. Printer will print Accu-Therm on the 10-12 inches you pulled out if paper was put in correctly.